

INSTALLATION

1. CLEAN BODY MOUNTING SURFACE

- (a) Using a heat light, heat the body mounting surface to 40 – 60 °C (104 – 140 °F).


NOTICE:

Do not heat the body excessively.

- (b) Remove the adhesive tape from the body.
 (c) Wipe off stains with cleaner.

2. INSTALL ROCKER PANEL MOULDING

- (a) Install new No.3 outside moulding retainer.
 (b) Set the adhesive agent container to the sealer gun and apply to new moulding shown in the illustration.

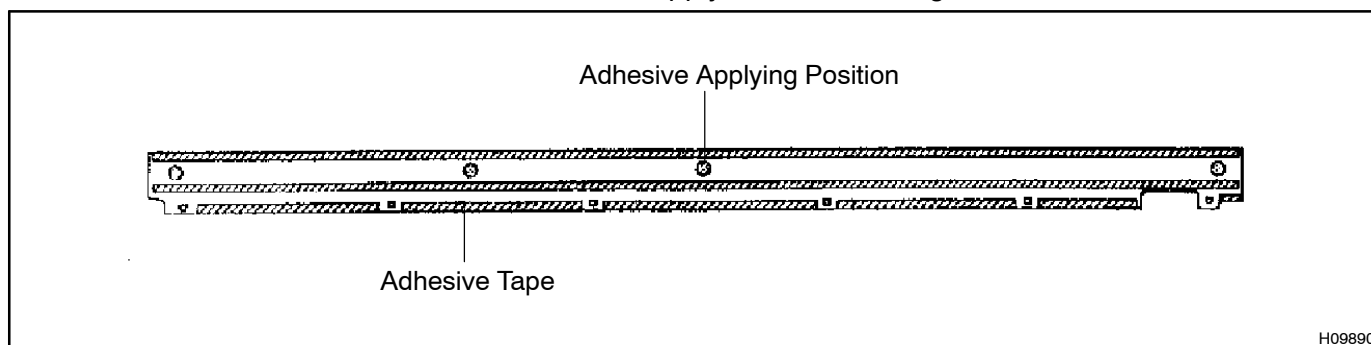

- (c) Using a heat light, heat the body and moulding.

Body: 40 – 60 °C (104 – 140 °F)

Moulding: 20 – 30 °C (68 – 86 °F)

- (d) Lift the moulding release sheet from the face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.

- (e) Set the moulding to the body, aligning to the clip position, and apply pressure thoroughly by hands to fix.
 (f) Install new No.3 outside moulding clips.

3. INSTALL ROCKER PANEL MOULDING PROTECTOR