


mm	in.
100	3.94
170	6.69

HINT: Take care not to damage the internal reinforcement.

INSTALLATION

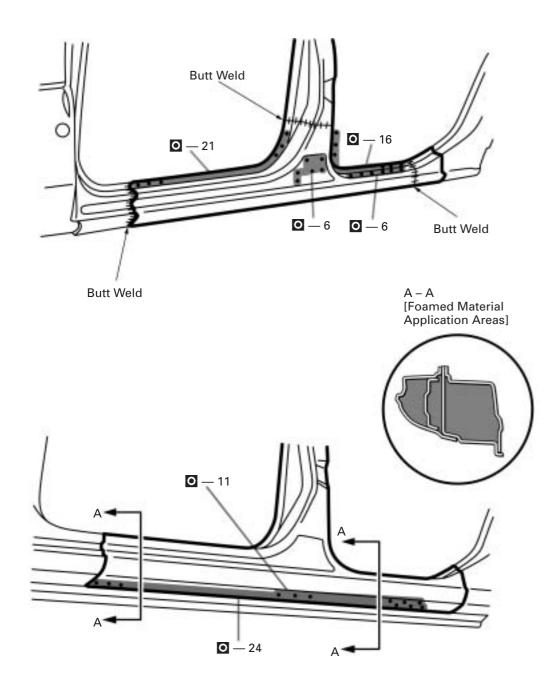

- 1. Temporarily install the new parts and check the fit of the front door and rear door.
- 2. After installing the new parts, apply foamed materials.