

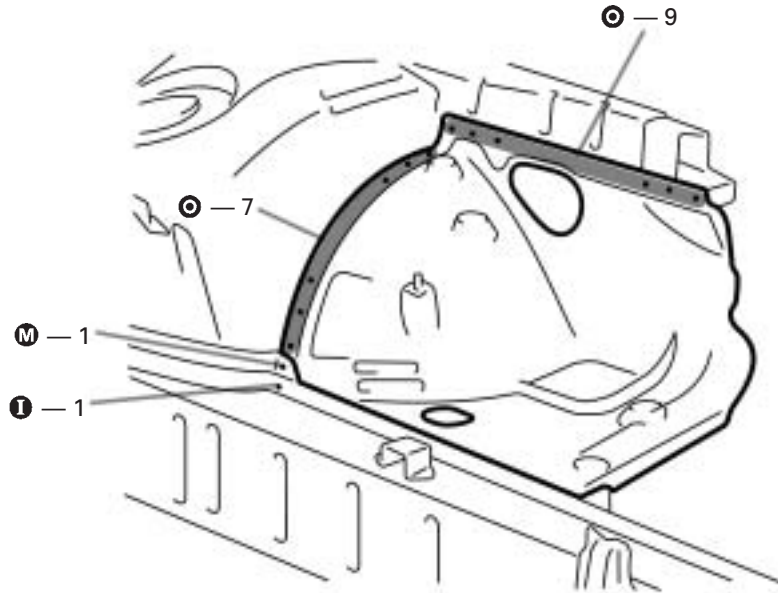
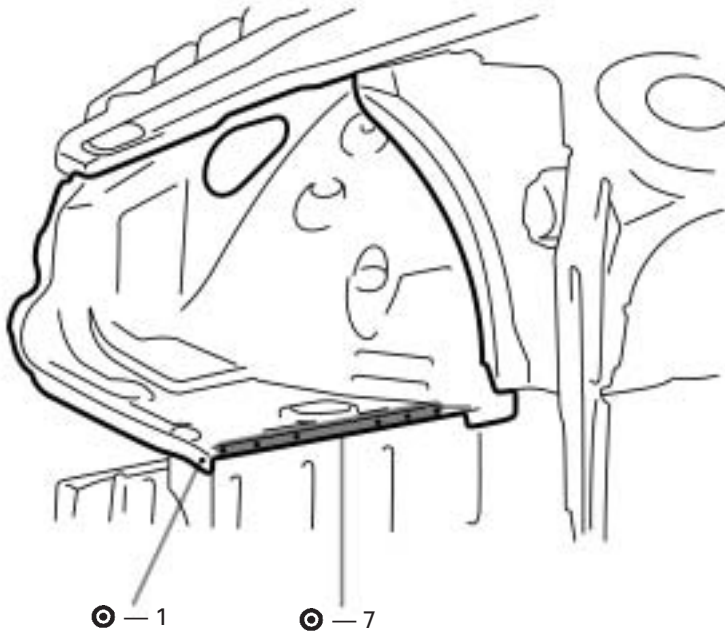


# FRONT FENDER FRONT APRON (ASSY)

REMOVAL (With the radiator side support removed.)

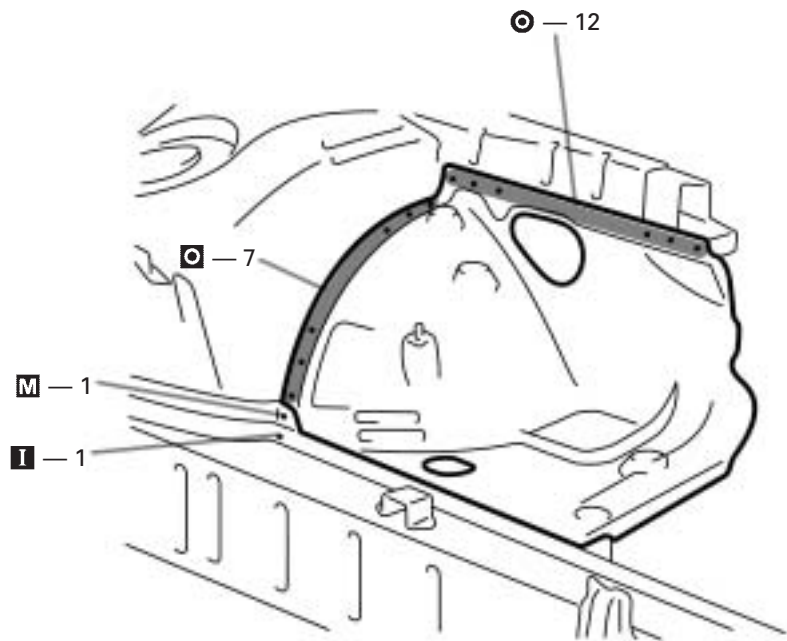

## INSTALLATION

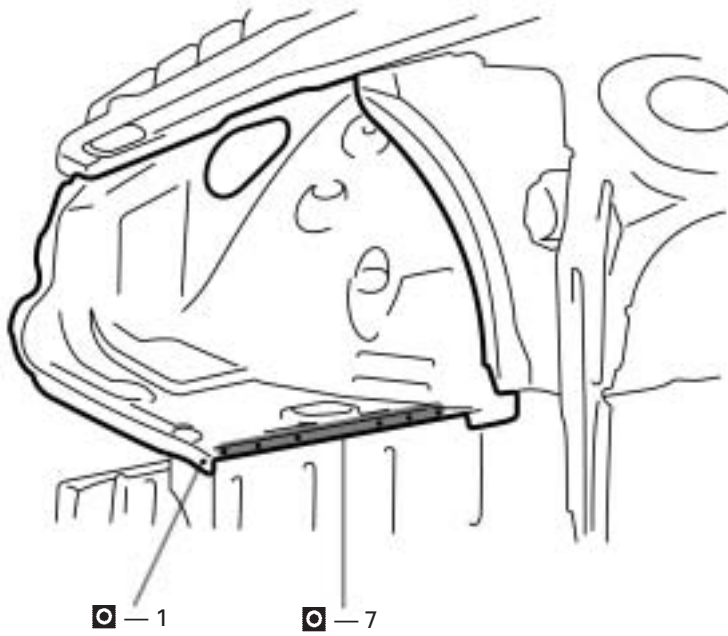

1. Temporarily install the new parts and measure each part in accordance with the body dimension diagram.