


- 1. Replace the front fender bracket at the same time.
- 2. After removing the front body pillar lower gusset, remove the cowl top side panel.

## INSTALLATION

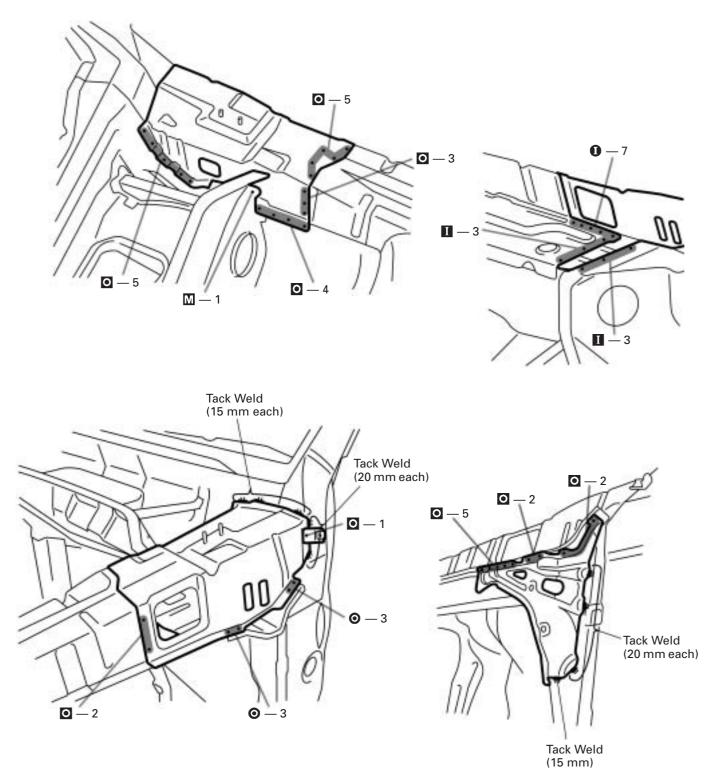

1. Temporarily install the new parts and measure each part accordance with the body dimension diagram.

mm	in.
15	0.59
20	0.79