

## FRONT APRON TO COWL SIDE MEMBER (ASSY)

## **REMOVAL** (With the front fender front apron removed.)



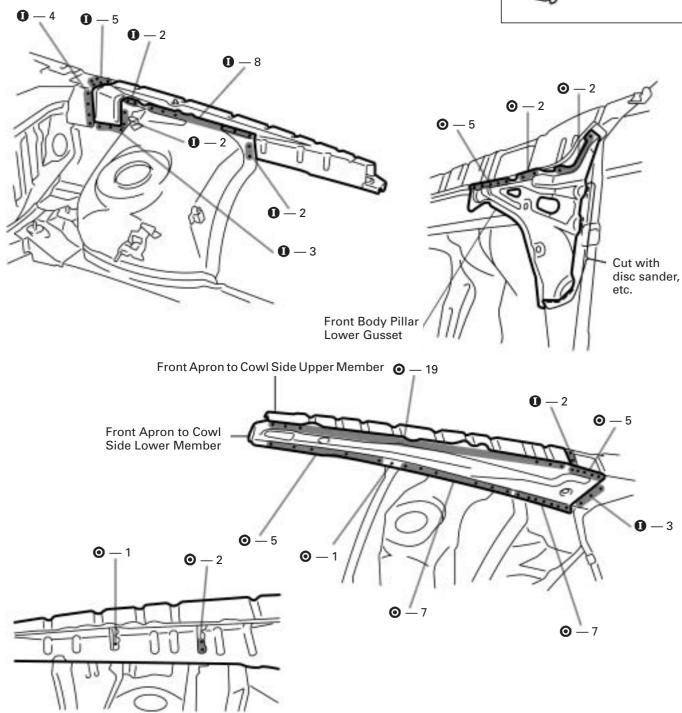

 After removing the front body pillar lower gusset and front apron to cowl side lower member, remove the front apron to cowl side upper member.

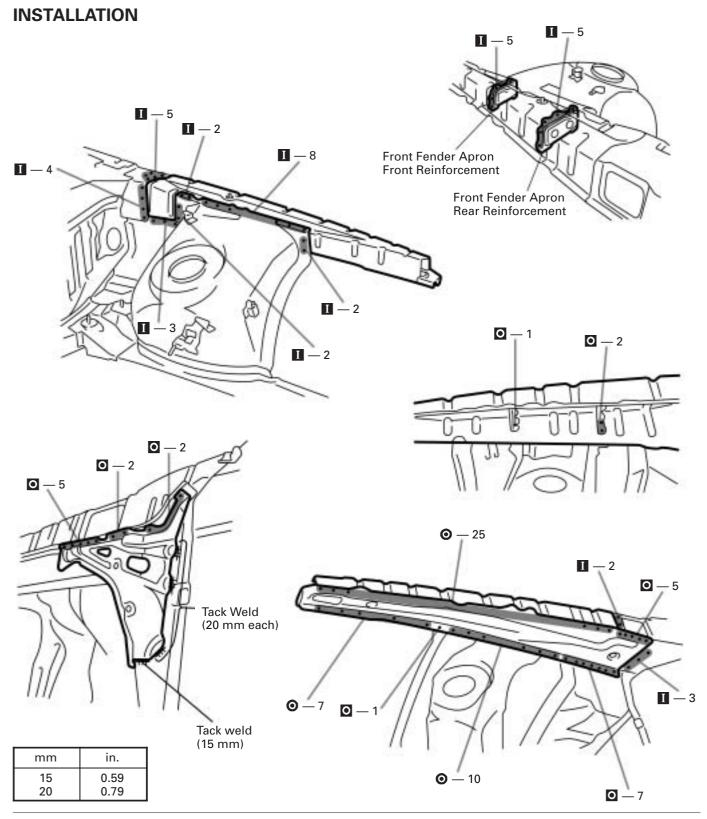

- 1. Temporarily install the new parts and measure each part in accordance with the body bimension diagram.
- 2. Temporarily install the front fender and hood, and check the fit.