


## PARKING BRAKE PEDAL ON-VEHICLE INSPECTION

BR0C0-02

### 1. CHECK PARKING BRAKE PEDAL TRAVEL

Depress the parking brake pedal all the way and count the number of clicks.

**Parking brake pedal travel at 294 N (30 kgf, 66.1 lbf):  
5 - 7 clicks**

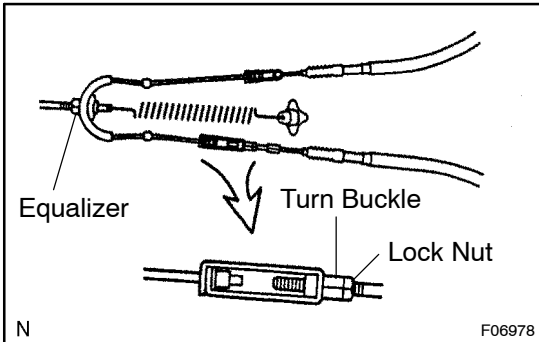

### 2. IF NECESSARY, ADJUST PARKING BRAKE

- Adjust the parking brake shoe clearance.
- Loosen parking brake cable lock nut and rotate the turn buckle to adjust the parking brake pedal travel.

#### HINT:

If the pedal cannot be adjusted only with the turn buckle, also use the equalizer.