


## TERMINALS OF ECU

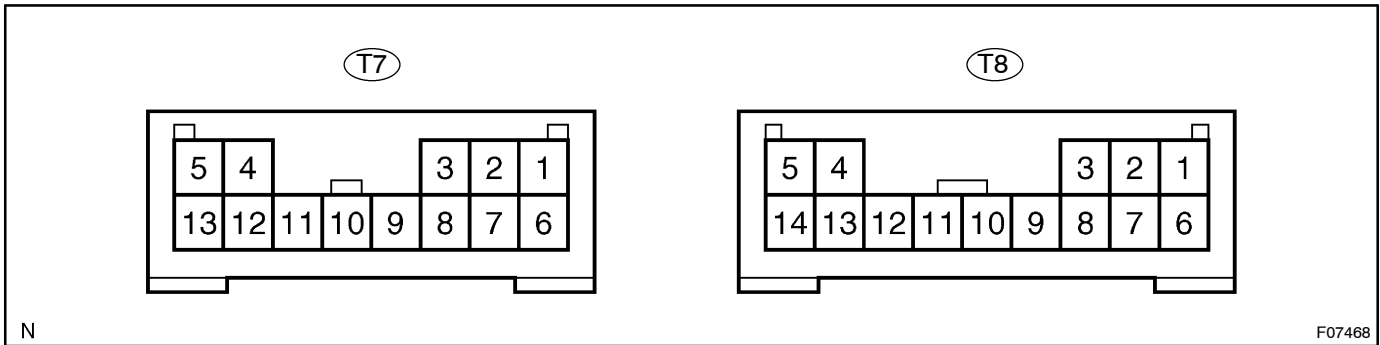

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
P (A/T) - Body Ground (T8-1 - Body Ground)	G-W - Body Ground	IG switch ON, shift lever "P" range	10 - 14
		IG switch ON, except above	Below 1
IG - Body Ground (T8-2 - Body Ground)	R-L - Body Ground	IG switch ON	10 - 14
		IG switch OFF	Below 1
UWSW - Body Ground (T8-3 - Body Ground)	P-G - Body Ground	IG key inserted in the key cylinder	Below 1
		IG key pulled out from the key cylinder	10 - 14
ECUB - ECUE (T8-5 - T8-14)	V-R - BR	Always	10 - 14
MSW - E1 (T8-9 - T8-13)	V-Y - BR	Key unlock warning switch ON, tilt up by manual switch	1.30 - 1.70
		Key unlock warning switch ON, tilt down by manual switch	0.30 - 0.50
		Key unlock warning switch ON, telescopic contracted by manual switch	0.65 - 0.95
		Key unlock warning switch ON, telescopic extended by manual switch	2.05 - 2.75
		Manual switch is not operating	Below 0.2
TIS - E1 (T8-10 - T8-13)	Y - BR	Key unlock warning switch ON, tilt fully raised	Below 1
		Key unlock warning switch ON, tilt fully lowered	4 - 6
TES - E1 (T8-11 - T8-13)	Y-B - BR	Key unlock warning switch ON, telescopic fully contracted	Below 1
		Key unlock warning switch ON, telescopic fully extended	4 - 6
VC - E1 (T8-12 - T8-13)	L-Y - BR	Key unlock warning switch ON	4 - 6
		Key unlock warning switch OFF	Below 1
E1 - Body Ground (T8-13 - Body Ground)	BR - Body Ground	Always	Below 1
ECUE - Body Ground (T8-14 - Body Ground)	BR - Body Ground	Always	Below 1
TIM- - GND (T7-2 - T7-10)	R-L - W-B	Key unlock warning switch ON, tilt down	10 - 14
		Tilt is not operating	Below 1
+B - GND (T7-3 - T7-10)	L-O - W-B	Always	10 - 14
TEM+ - GND (T7-4 - T7-10)	L-B - W-B	Key unlock warning switch ON, telescopic contracted	10 - 14
		Telescopic is not operating	Below 1
TIM+ - GND (T7-5 - T7-10)	R-B - W-B	Key unlock warning switch ON, tilt up	10 - 14
		Tilt is not operating	Below 1
TEM- - GND (T7-9 - T7-10)	L-Y - W-B	Key unlock warning switch ON, telescopic extended	10 - 14
		Telescopic is not operating	Below 1
GND - Body Ground (T7-10 - Body Ground)	W-B - Body Ground	Always	Below 1