

## REASSEMBLY

Reassembly is in the reverse order of disassembly (See page BR-46).

### NOTICE:


Apply high temperature grease to the parts indicated by the arrows (See page BR-45).

### 1. ADJUST PARKING BRAKE SHOE CLEARANCE

- (a) Temporarily install the hub nuts.
- (b) Install the 2 screws.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

- (c) Remove the hole plug.

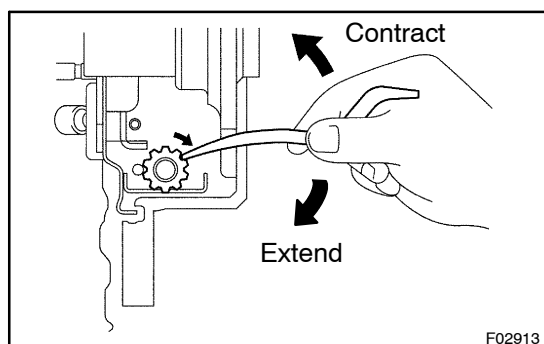

- (d) Turn the adjuster and expand the shoes until the disc locks.

- (e) Return the adjuster to notches.

- (f) Install the hole plug.

### 2. SETTLING PARKING BRAKE SHOES AND DISC

- (a) Drive the vehicle at about 50 km/h (31 mph) on a safe, level and dry road.

- (b) Depress the parking brake pedal with a force of 147 N (15 kgf, 33 lbf).

- (c) Drive the vehicle for about 400 meters (0.25 mile) in this condition.

- (d) Repeat this procedure 2 or 3 times.

### 3. CHECK AND ADJUST PARKING BRAKE PEDAL TRAVEL (See page BR-9)