


# TERMINALS OF ECU

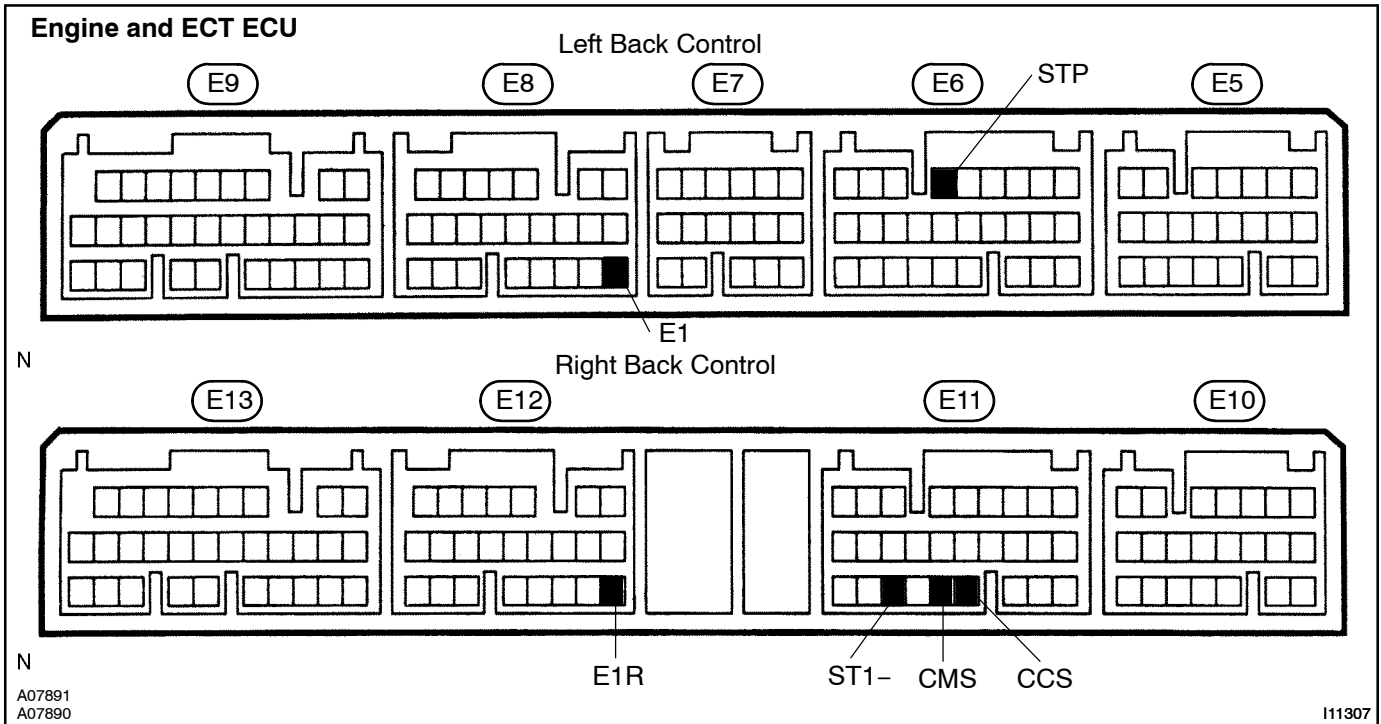

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
STP ↔ E1 (E6 - 6 ↔ E8 - 17)	V ↔ W-B	Depress brake pedal	10 - 16 V
		Release brake pedal	Below 1 V
CCS ↔ E1R (E11 - 23 ↔ E12 - 17)	L ↔ W-R	Ignition switch ON	10 - 16 V
		Ignition switch ON CANCEL switch held ON	3.6 - 7.2 V
		Ignition switch ON SET/COAST switch held ON	2.1 - 4.9 V
		Ignition switch ON RES/ACC switch hold ON	0.7 - 2.6 V
		Ignition switch ON Main switch OFF	10 - 16 V
		Ignition switch ON Main switch ON	Below 0.5 V
CMS ↔ E1R (E11 - 24 ↔ E12 - 17)	LG ↔ W-R	Ignition switch ON Main switch OFF	Below 1 V
		Ignition switch ON Main switch ON	10 - 14 V
ST1- ↔ E1R (E11 - 26 ↔ E12 - 17)	R-L ↔ W-B	Depress brake pedal	Below 1 V
		Release brake pedal	10 - 14 V