

<b>DTC</b>	<b>B1265/65</b>	<b>Rear Light ECU LH communication stop</b>
------------	-----------------	---

## CIRCUIT DESCRIPTION

This DTC is output when communication stops between rear light ECU LH and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1271/71	No communication from rear light ECU LH more than 10 seconds.	<ul style="list-style-type: none"> <li>• Rear light ECU LH</li> <li>• Wireharness</li> </ul>

## WIRING DIAGRAM

See page DI-720.

## INSPECTION PROCEDURE

<b>1</b>	<b>Check rear light ECU LH.</b>
----------	---------------------------------

### CHECK:

Start the engine and check that the speed meter and tacometer operate normally.

### HINT:


With this inspection, the rear light ECU LH can be diagnosed if it works normally or not.

**NG**

**Replace the rear light ECU LH.**

**OK**

## 2 Check wireharness

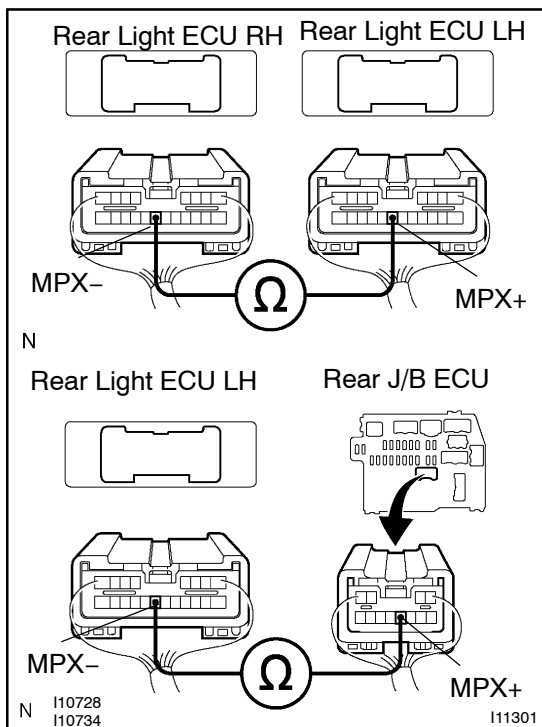

### PREPARATION:

Disconnect connector "R32" of rear light ECU RH, "R27" of rear J/B ECU and "R31" of rear light ECU LH.

### CHECK:

- Check continuity between terminals MPX- of rear light ECU RH and MPX+ of rear light ECU LH.
- Check continuity between terminals MPX- of rear light ECU LH and MPX+ of rear J/B ECU.

### OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

### HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace the rear light ECU LH.