

DTC	B1264 / 64	Rear Light ECU RH communication stop
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between rear light ECU RH and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1271/71	No communication from rear light ECU RH more than 10 seconds.	<ul style="list-style-type: none"> • Rear light ECU RH • Wireharness

WIRING DIAGRAM

See [page DI-720](#).

INSPECTION PROCEDURE

1	Check rear light ECU RH.
----------	---------------------------------

CHECK:

Start the engine and check that the rear light RH light up normally.

HINT:


With this inspection, the rear light ECU RH can be diagnosed if it works normally or not.

NG

Replace the rear light ECU RH.

OK

2 Check wireharness

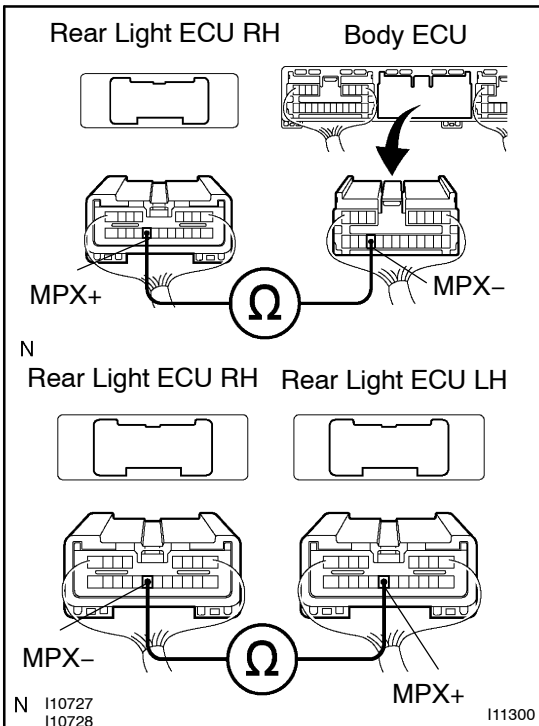

PREPARATION:

Disconnect connector "B8" of body ECU, "R31" of rear light ECU LH and "R32" of rear light ECU RH.

CHECK:

- Check continuity between terminals MPX- of body ECU and MPX+ of rear light ECU RH.
- Check continuity between terminals MPX- of rear light ECU RH and MPX+ of rear light ECU LH.

OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace the rear light ECU RH.