


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Body ECU.

WIRING DIAGRAM

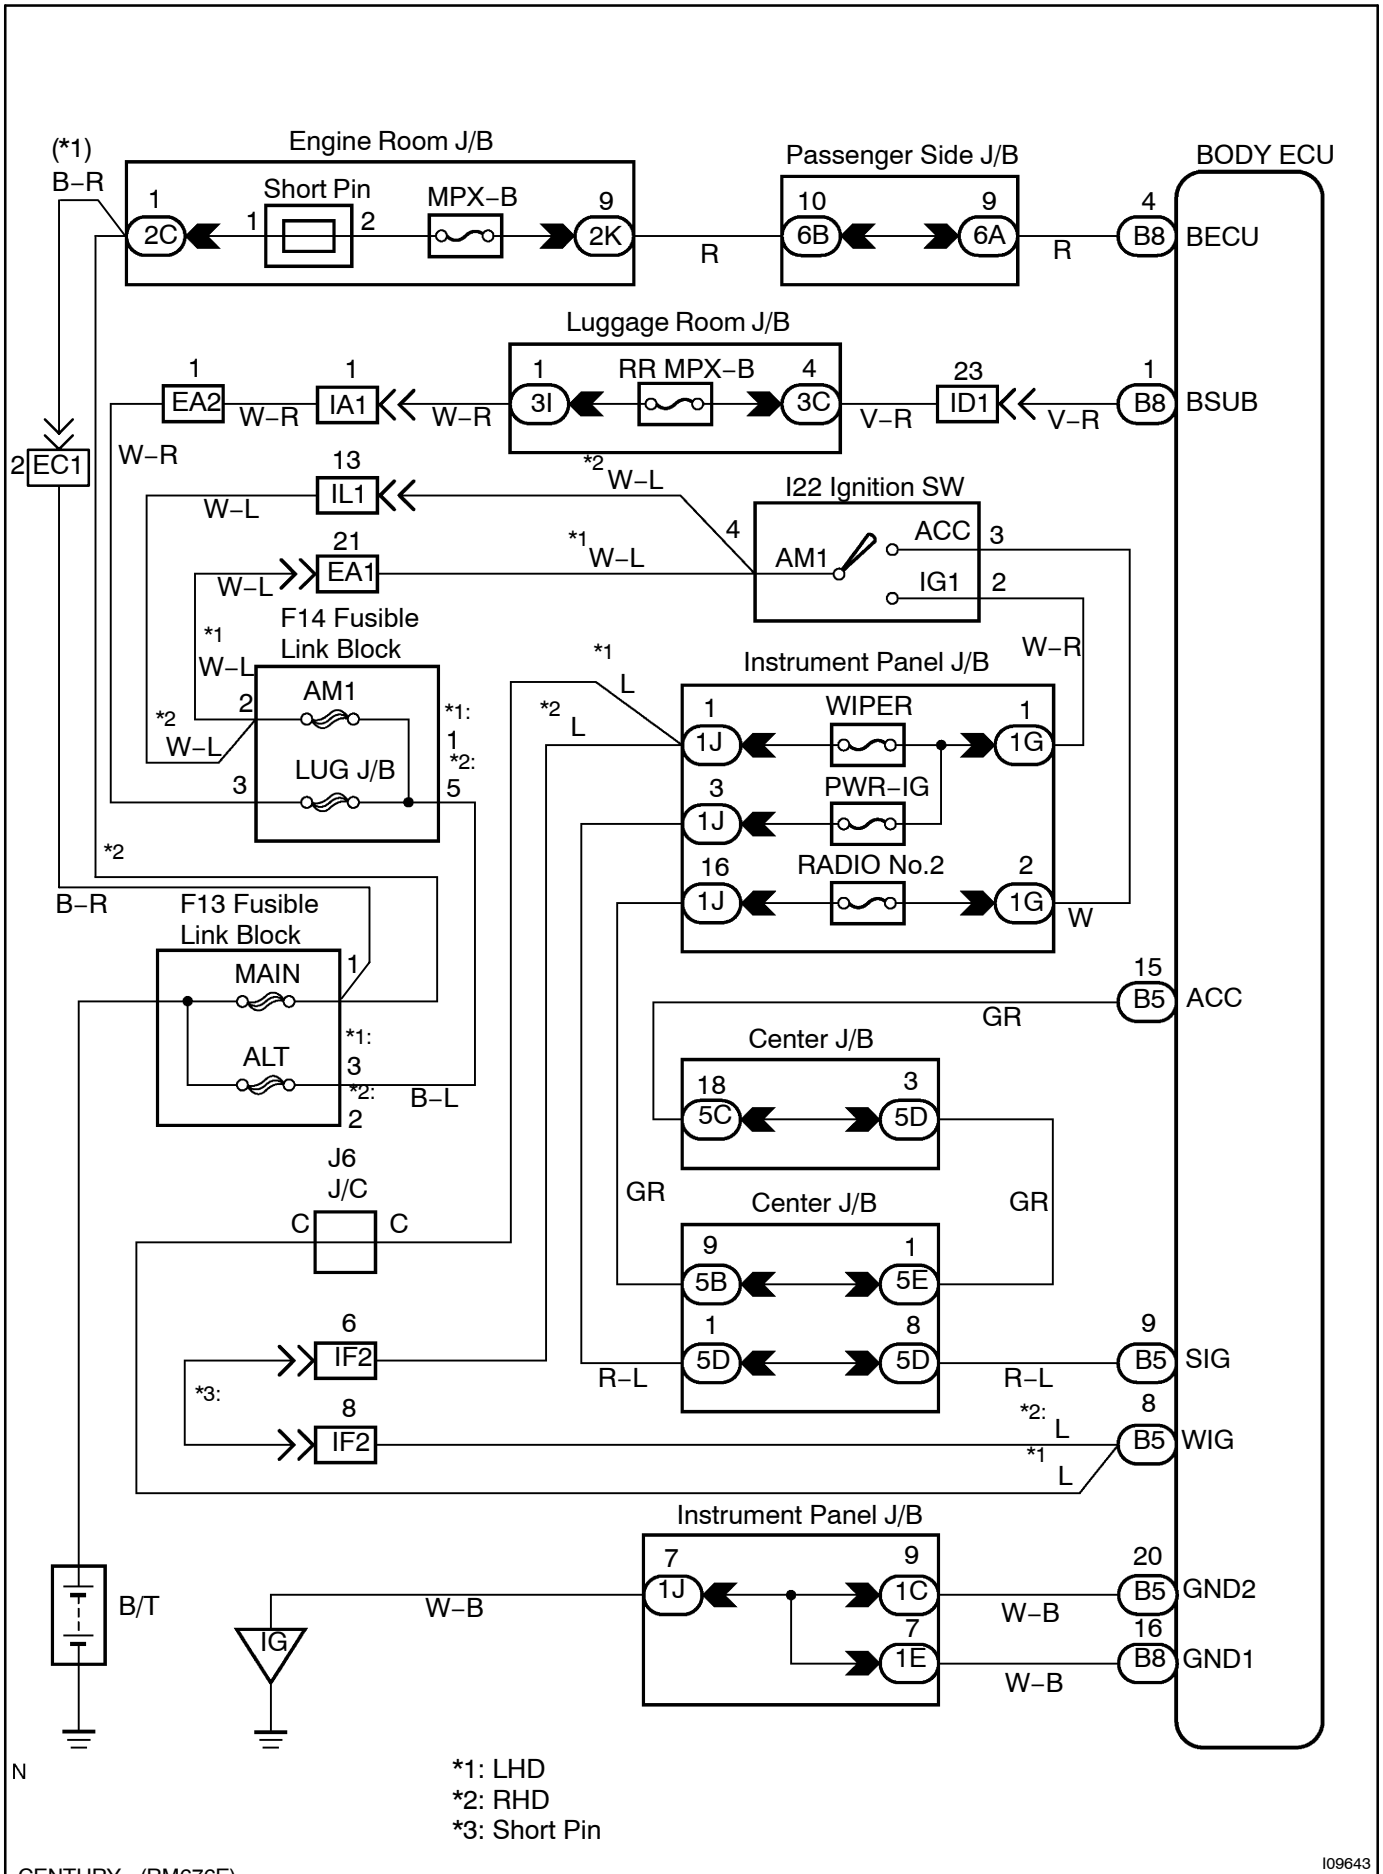

INSPECTION PROCEDURE

1	Check WIPER, RADIO No.2, PWR-IG, MPX-B, and RR MPX-B fuse.
----------	---

CHECK:

Check continuity of WIPER, RADIO No. 2, DOOR, DOOR2, and GAUGE fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminals WIG, ACC, BECU, BSUB, and SIG and GND or GND2 of Body ECU connector.
----------	---

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals WIG, ACC, SIG, and GND, GND2.

OK:

Voltage: 10 – 14V

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:

Measure voltage between terminals BECU, BSUB and GND, GND2.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem/symptoms table (See page DI-488)

NG

3 Check wireharness and connector between Body ECU and body ground (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between Body ECU and battery (See page IN-30).