

DTC	B1263 / 63	Rear Junction Block ECU communication stop
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between rear J/B ECU and Body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1263/63	No communication from rear J/B ECU more than 10 seconds.	<ul style="list-style-type: none"> • Rear J/B ECU • Wireharness

WIRING DIAGRAM

See [page DI-720](#).

INSPECTION PROCEDURE

1	Check rear J/B ECU.
----------	----------------------------

CHECK:

Check that the operation of luggage compartment door opener system is normal.

HINT:


With this inspection, the rear J/B ECU can be diagnosed if it works normally or not.

NG

Replace the rear J/B ECU.

OK

2 Check wireharness

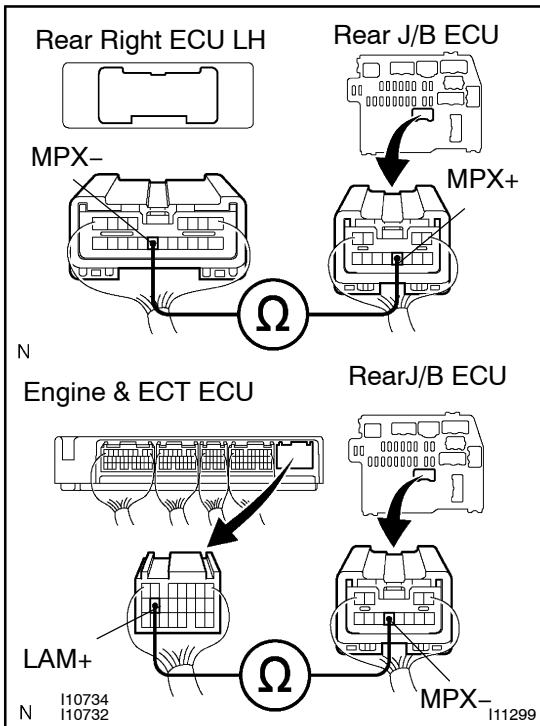

PREPARATION:

Disconnect connector "R31" of rear left door ECU, "E5" of Engine and ECT ECU and "R27" of rear J/B ECU.

CHECK:

- Check continuity between terminals MPX- of rear light ECU LH and MPX+ of rear J/B ECU.
- Check continuity between terminals MPX- of rear J/B ECU and LAM+ of Engine and ECT ECU.

OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace rear J/B ECU.