


DTC	C0226 / 21 - C1227 / 27	ABS Solenoid Circuit
------------	--------------------------------	-----------------------------

CIRCUIT DESCRIPTION

This solenoid comes on when signals are received from the ECU and controls the pressure acting on the wheel cylinders thus controlling the braking force.


DTC No.	DTC Detecting Condition	Trouble Area
C0226 / 21	Open or short circuit for SFRH or SFRR circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SFRH or SFRR circuit
C0236 / 22	Open or short circuit for SFLH or SFLR circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SFLH or SFLR circuit
C0246 / 23	Open or short circuit for SRRH or SRRR circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SRRH or SRRR circuit
C0256 / 24	Open or short circuit for SRLH or SRLR circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SRLH or SRLR circuit
C1225 / 25	Open or short circuit for SMFR, SMFL or SMR circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SMFR, SMFL or SMR circuit
C1226 / 26	Open or short circuit for SPFR or SPFL circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SPFR or SPFL circuit
C1227 / 27	Open or short circuit for SRCF or SRCR circuit continues for 0.05 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • SRCF or SRCR circuit

WIRING DIAGRAM

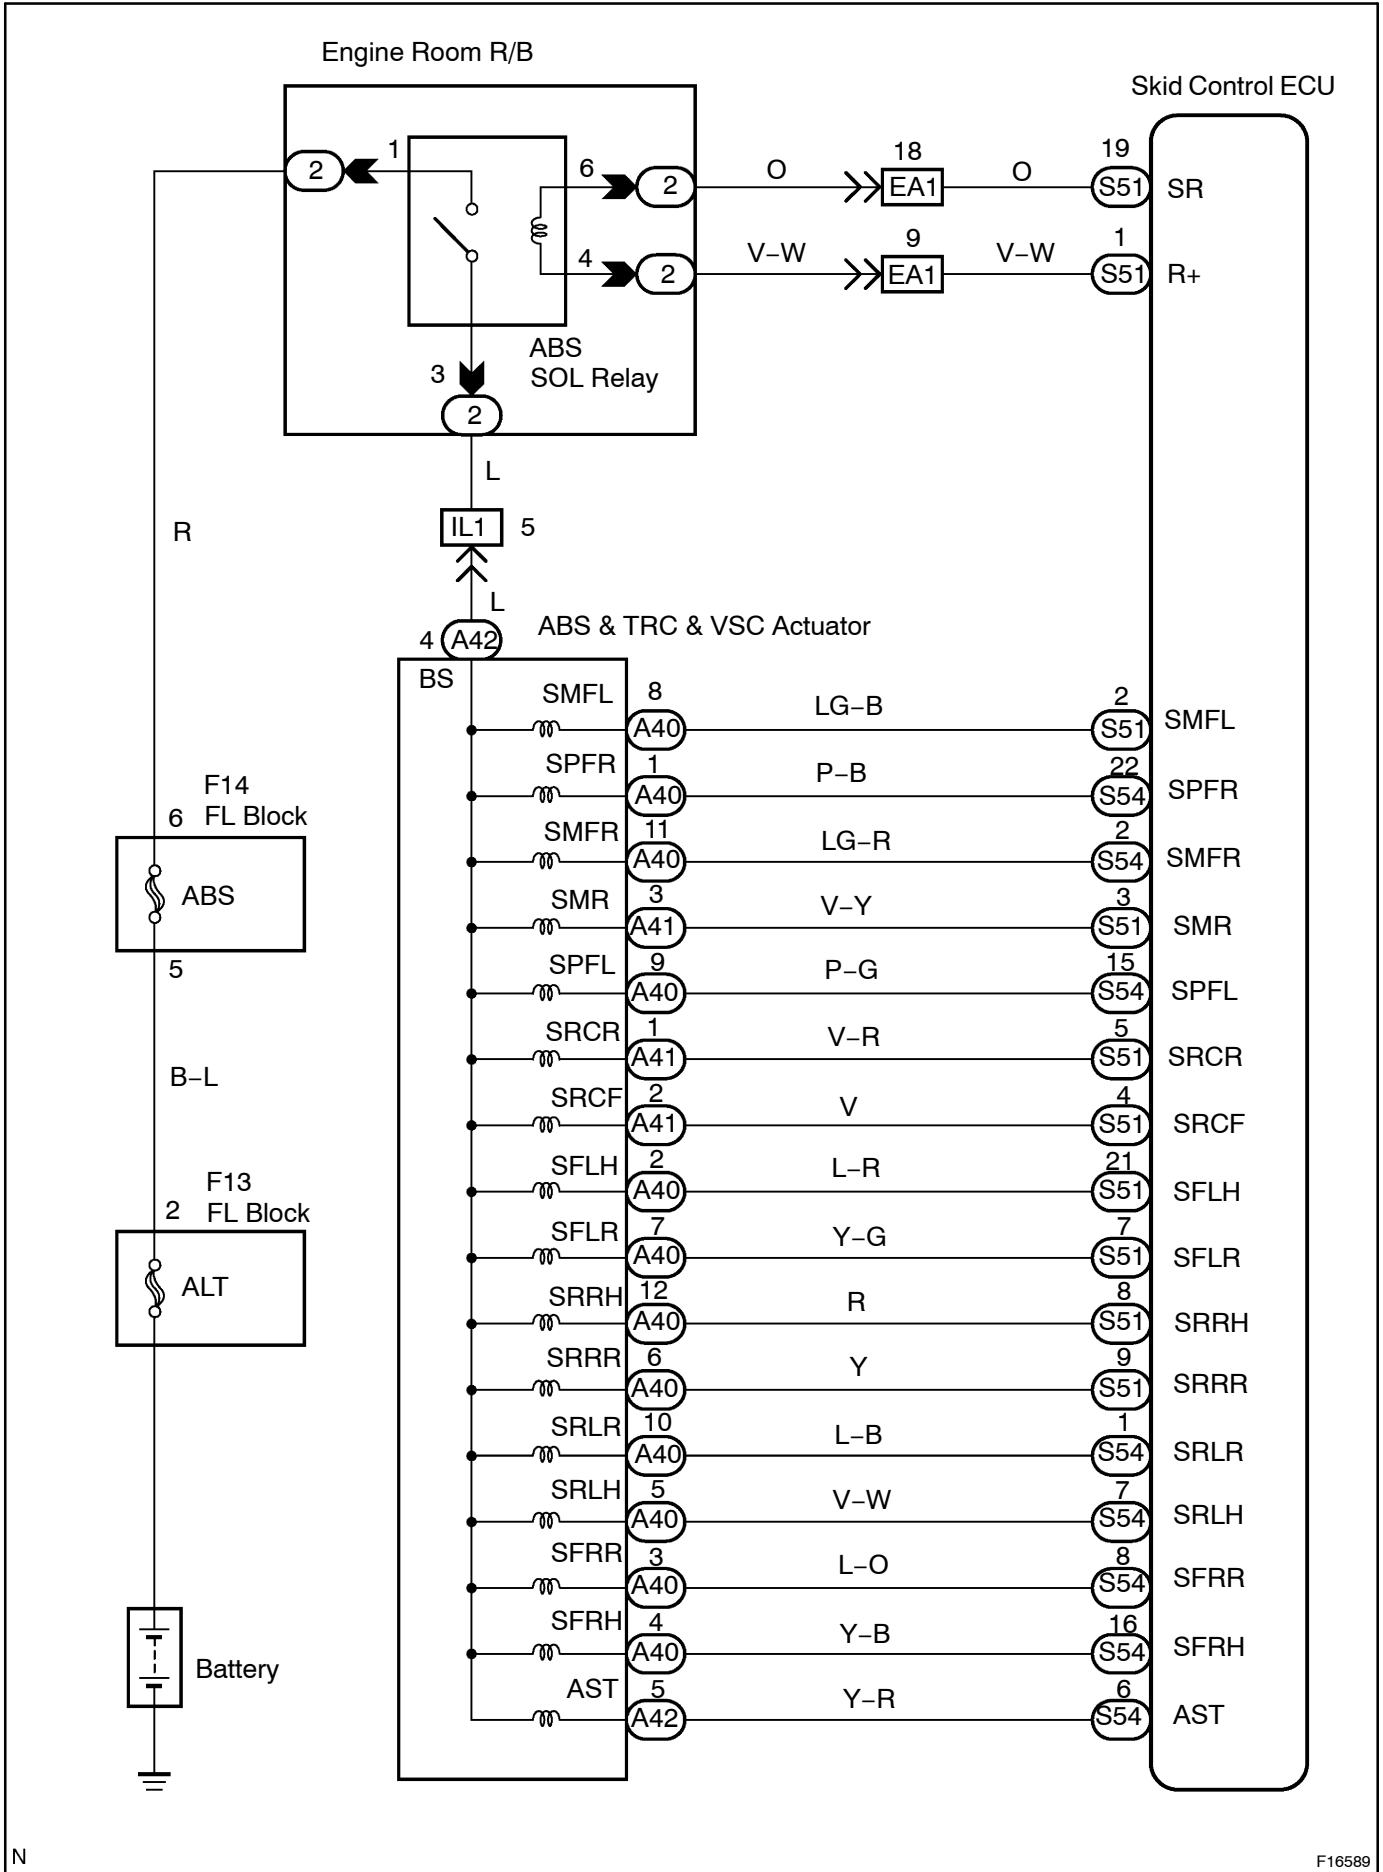

INSPECTION PROCEDURE

1 Check brake actuator solenoid.

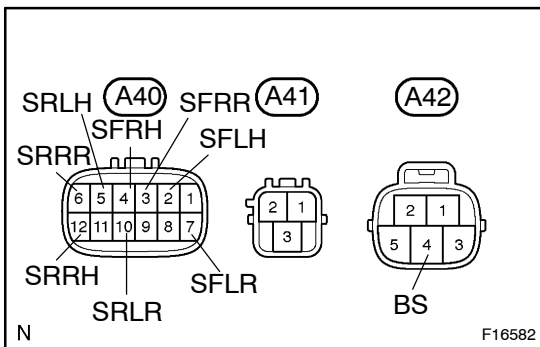**PREPARATION:**

Disconnect the 3 connectors from brake actuator.

CHECK:

Check continuity between terminal BS and terminals SFRH, SFLH, SRRH, SRLH, SFRR, SFLR, SRRR and SRLR of brake actuator.

OK:**Continuity****HINT:**

(Reference)

Resistance of each solenoid at 25°C

SFRH, SFLH, SRRH, SRLH: 8.3 – 9.3 Ω

SFRR, SFLR, SRRR, SRLR: 4.0 – 4.6 Ω

CHECK:


Check continuity between terminal BS and terminals SMFR, SMFL, SMR, SPFR, SPFL, SRCF and SRCR of brake actuator.

OK:**Continuity****HINT:**

Resistance of each solenoid at 25°C

SMFR, SMFL, SMR, SPFR, SPFL: 8.3 – 9.3 Ω

SRCF, SRCR: 8.1 – 9.1 Ω

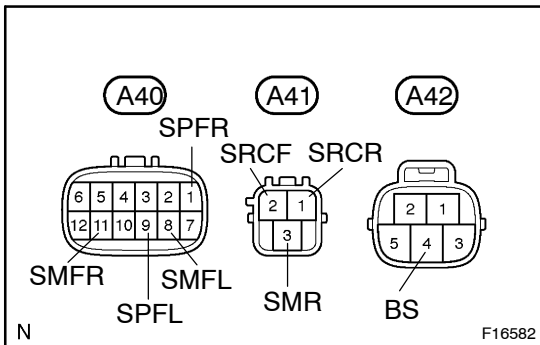

NG

Replace brake actuator.

OK

2 Check for open and short circuit in harness and connector between skid control ECU and brake actuator (See page IN-31).

NG

Repair or replace harness or connector.

OK

If the same code is still output after the DTC is deleted, check the contact condition of each connection. If the connections are normal, the ECU may be defective.